

User manual

Mercedes-Benz AMG GT

Ref. 717 - 7172



6V



Follow us on



03-16 V.1

PATENTED MODEL AND DESIGN © INJUSA 2016

Congratulations

and thank you for buying your Mercedes-Benz from Injusa.

To ensure you and your child enjoy your purchase safely and for as long as possible, we recommend you read these instructions carefully and keep them safe for future reference.

By following the instructions and recommendations provided, you will enjoy this product properly and safely.

Should you have any questions, contact the customer service department in your country, or contact us via our webpage www.injusa.com.

“Mercedes-Benz”, and the design of the product included are subject to the intellectual property rights owned by Industrial Juguetera, S.A., used under licence.



INDUSTRIAL JUGUETERA, S.A.
AVDA. DE AZORÍN, 20
03440 IBI (ALICANTE) ESPAÑA
TEL.: 96 555 08 62 / FAX: 96 555 33 56
www.injusa.com / info@injusa.com

Content

Safety	2
General warnings	2
Warnings about charging the battery	2
User warnings.....	2
Parts	3
Parts for assembly.....	3
Screws.....	3
Connections	4
Connect the battery to the engine	4
Charge the battery.....	4
Assembly	5
Batteries for sound and Mp3	5
Safety warnings	5
Assemble the mileage clock.....	6
Assemble the windscreen.....	7
Assemble the steering wheel.....	8
Assemble the rear view mirrors	9
Assemble the backrest	10
Operation	11
Car controls	11
Remote control function.....	12
Functioning without remote control.....	13
Remote Control App	14
Maintenance	18
General.....	18
Cleaning	18
Battery	18
Recharging the battery.....	18
Periods of inactivity	18
Replacing the battery.....	19
Recycling the battery	19
Thermal fuse	19
Battery for sound and Mp3	20
Recycling.....	20
Spare parts	21
Screws.....	21
Despiece.....	22
Services, repairs	24

General warnings

- Use under the supervision of an adult. Read the instructions before using this product, follow them carefully and retain them for future reference.
- **THE VEHICLE MUST BE ASSEMBLED BY AN ADULT.** Remove the assembly tools and fixings before giving the toy to a child.
- Incorrect assembly of the steering wheel and seat could be dangerous.
- **DO NOT OVERLOAD THE VEHICLE. IT IS DESIGNED FOR USE BY A CHILD.**
- Do not leave the vehicle close to a heat source (radiators, etc.).

Warnings about charging the battery

- This item can only be used with a rechargeable 6V battery ref.997 made by INJUSA and a 6V battery charger ref.992 also made by INJUSA. Only use the batteries and charger specified by the manufacturer.
- **THE CHARGER IS NOT A TOY.**
- **DO NOT SHORT CIRCUIT THE POWER TERMINALS.**
- Only an adult who has read and understood the safety warnings should handle, charge, or recharge the battery.
- The battery's protective cover should be removed and replaced by an adult using an appropriate tool, which must be kept out of the reach of children.
- When this product leaves the factory, the batteries are fully charged, but before using it for the first time you will need to charge them again for maximum effectiveness.
- **ONLY CHARGE IN A WELL-VENTILATED AREA.**

 **WARNING. RISK OF FIRE. Do not bypass. Replace only with battery ref.997 6V Injusa.**

Conforms to the safety requirements of Specification F963, Injusa, Avda. Azorín nº20, Ibi, Alicante, Spain.

User warnings


- This article is only for use by children aged three and above. The maximum weight of the child is 30kg.
- Use under the supervision of an adult.
- Make sure the vehicle is used in a large enough space that is adequate for its usage, in other words, on a flat surface with no steps or dangerous obstacles.
- To ensure the product is used and handled safely, make sure the child knows how to use the accelerator and the vehicle steering system correctly.
- Since the vehicle requires stability and skill to avoid falls or collisions, make sure it is used appropriately so that it does not endanger the user or others.
- Warning. Using this item in public areas could cause an accident.
- **DO NOT USE** the vehicle on public roadways.
- **DO NOT TAKE** the vehicle into water or onto sand.
- Do not leave the vehicle close to a heat source (radiators, etc.).

 **WARNING.** To reduce the risk of injury, adult supervision is required. Never use in roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water; always wear shoes, and never allow more than one rider.

Parts for assembly

1. Main chassis
2. Rear view mirrors
3. Windscreen
4. Mileage clock (decorative)
5. Steering wheel
6. Respaldo

⚠ WARNING
 Adult assembly required because it contains potentially hazardous sharp edges, sharp points and small parts in its unassembled state.

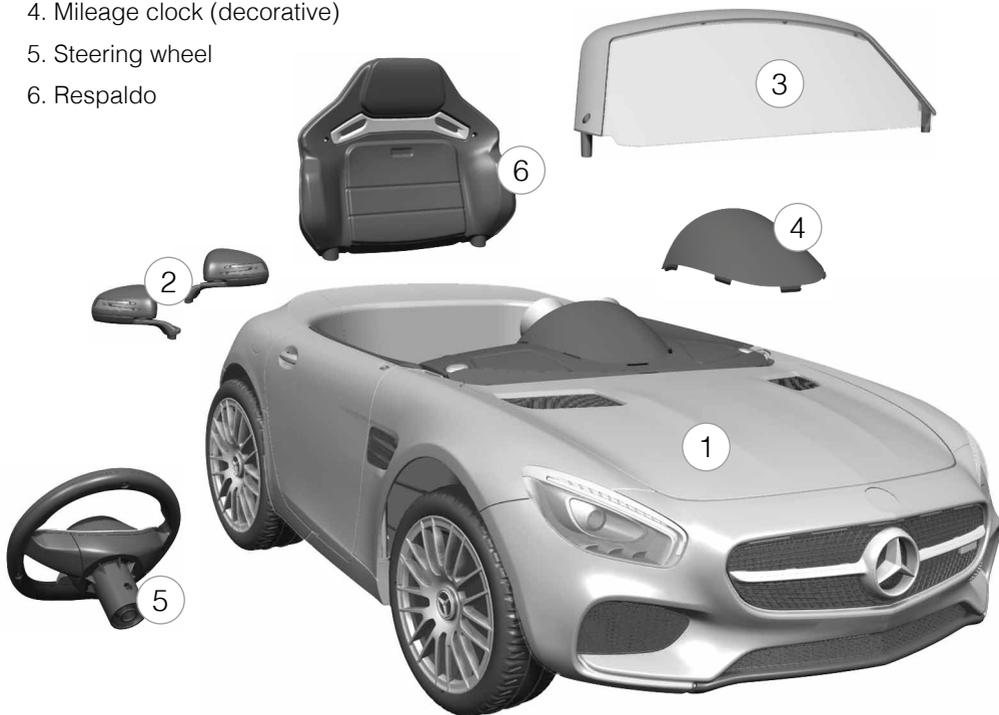

Screws



(x7)

Ø 3,6x13 mm



(x1)

M5x35mm



(x8)

Tuerca M5



(x2)

Ø3,6x40mm


⚠ WARNING
CHOKING HAZARD

Small parts.
 Not for children under 3 years.

Connect the battery to the engine

• **IMPORTANT:** Connections must be made by an adult.

1. Plug the connector (B) into the port (A), located underneath the back end of the vehicle.

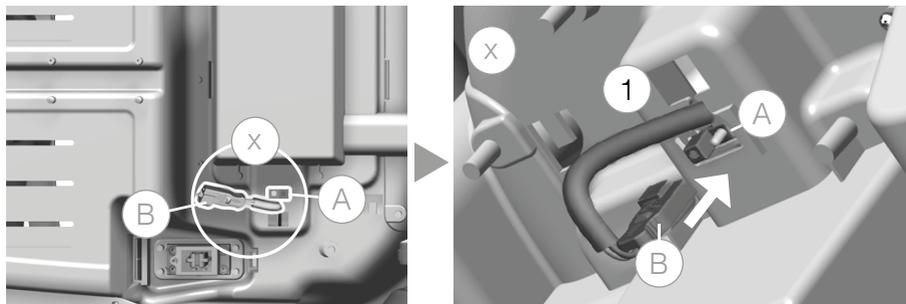


Charge the battery

• Only an adult who has read and understood the safety warnings should handle, charge, or recharge the battery.

• When this product leaves the factory, the batteries are fully charged, but before using it for the first time you will need to charge them again for maximum effectiveness.

1. Connect to the mains power supply using any 230v (EC), 230v (UK), or 120v (USA/ Mexico) plug socket, and the red charging pilot light will illuminate (showing that the charger is working).


2. Disconnect the connector (b), and connect the charger plug (c); the red pilot light on the charger will switch off, indicating that the battery is charging and that everything is working correctly. When the pilot light turns red again, the battery will be charged. The normal time taken to recharge is 10 to 12 hours. The amount of power used by the charger is minimal.

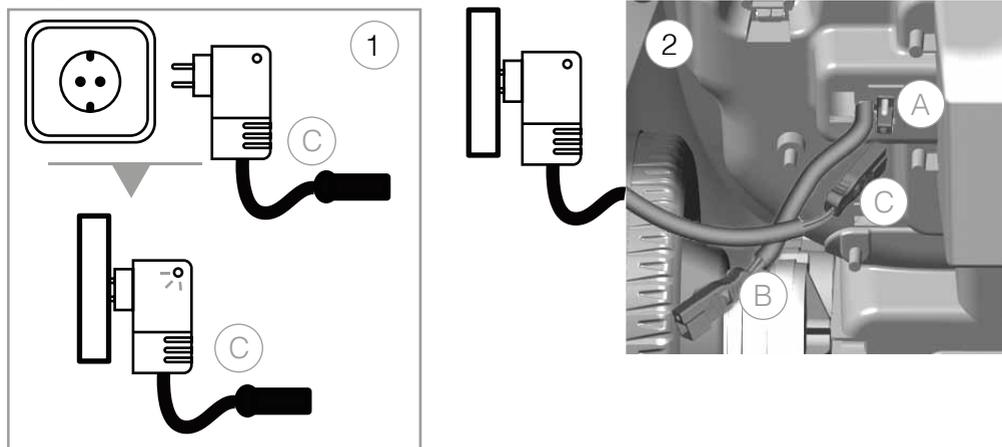

Batteries for sound and Mp3

• **IMPORTANT:** Batteries should only be handled by an adult.

1. Remove the cover to access the sound box, with the help of a screwdriver (not included).
2. Remove the sound box.
3. Remove the cover from the sound box to access the battery compartment, with the help of a screwdriver (not included).
4. Insert 3 new 1.5V LR03 AAA batteries (not included), making sure they are inserted the right way round (positive to negative, etc.).
5. Close the sound box lid and replace the sound box in the vehicle with the help of a screwdriver (not included).

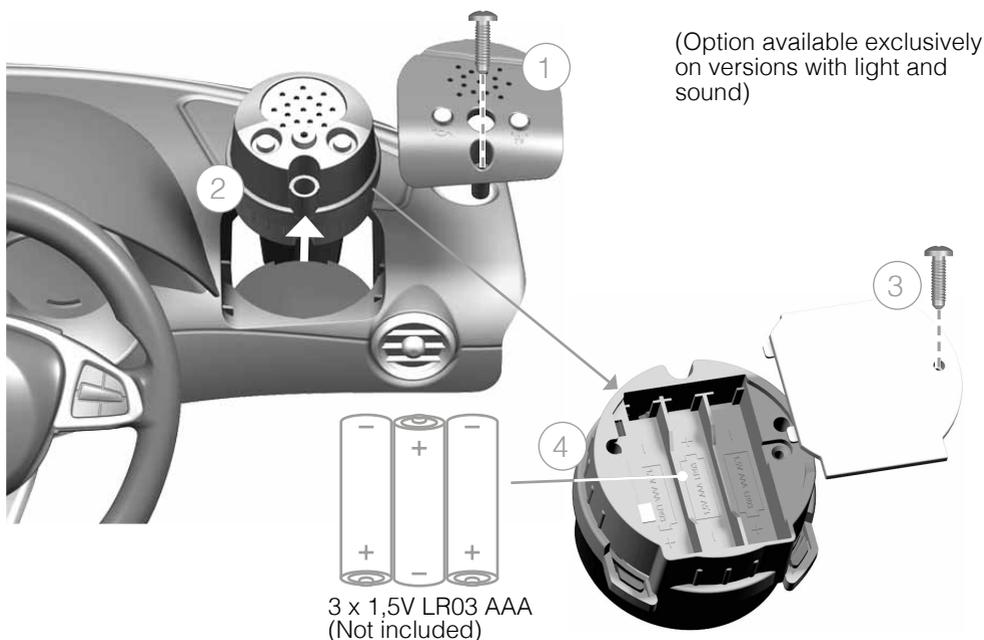


Safety warnings

- Remove the rechargeable batteries for charging. Do not recharge non-rechargeable batteries. Recharge under the supervision of an adult.
- Only use recommended batteries or the same type as recommended. Do not mix different types of batteries, and do not mix new and used batteries.
- Do not throw batteries away with normal household waste. Remove used batteries and dispose of them in the special containers.
- Batteries must be inserted the right way round (negative to positive, etc.).
- When the item will not be used for a long period of time, remove the batteries.
- No cortocircuitar los terminales de alimentación.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.


Assemble the mileage clock.

1. Line up the five tabs on the mileage clock with the holes on the dashboard and press until it fits into place.

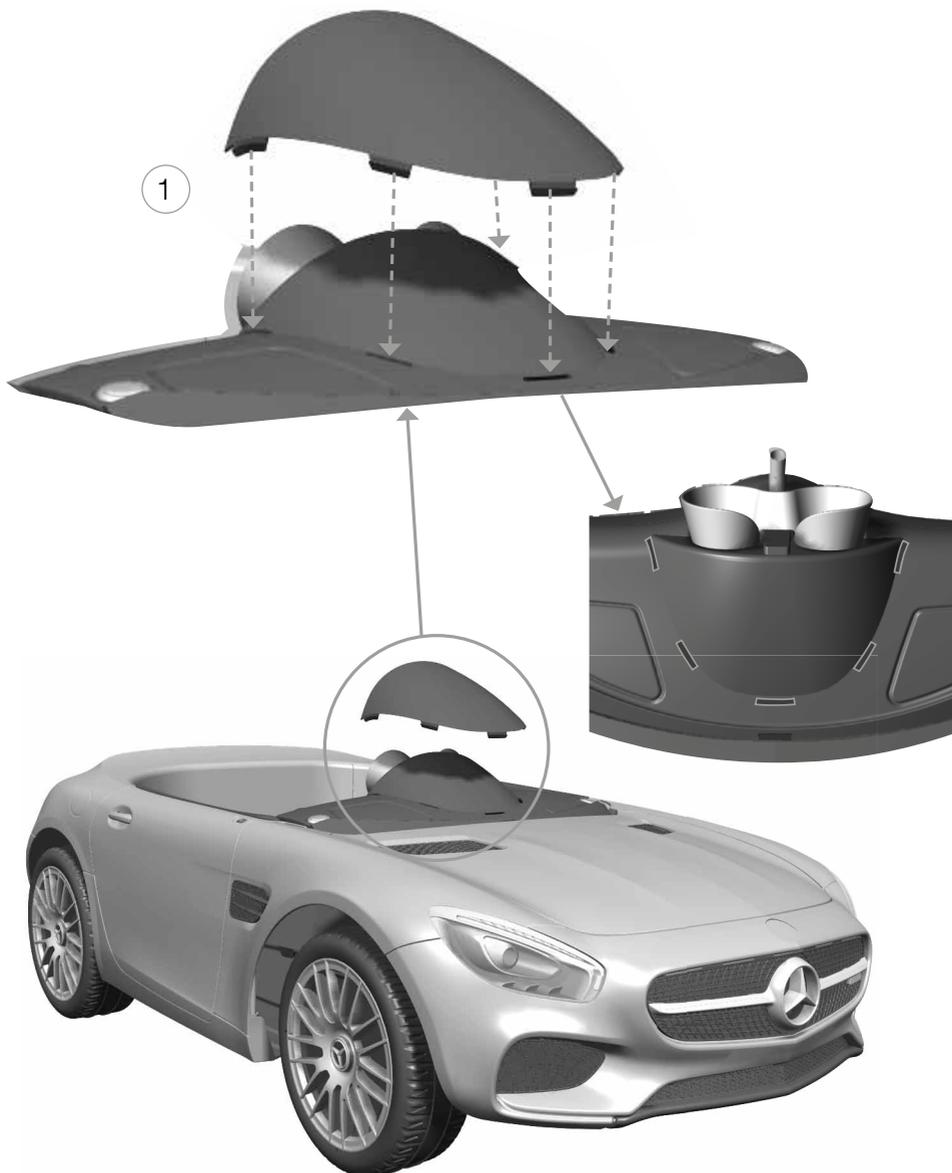



Assemble the windscreen

1. Line up the tabs on the windscreen with the holes on the dashboard and the clamping sleeves with the side holes.
2. Press to lock the windscreen in place so that the tabs are firmly anchored.
3. Insert a screw (a) into the corresponding hole on the side of the windscreen and screw in place with the help of a screwdriver (not included).
4. Repeat operation "3" on the opposite side of the windscreen.

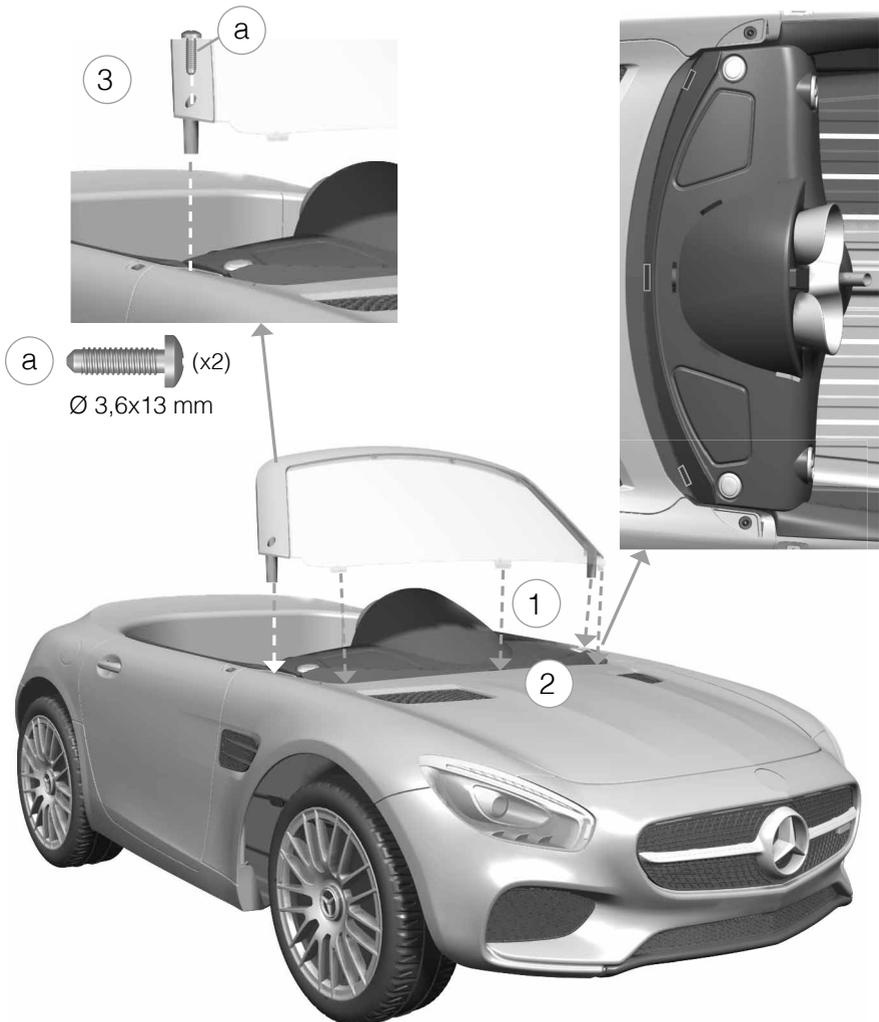

Assemble the steering wheel.

1. Insert the steering wheel into the steering column that protrudes from the dashboard.
2. Line up the holes on the stem of the steering wheel with the holes on the upper part of the steering column casing.
3. Insert screw (b) in the upper hole through the steering wheel and column.
4. Insert a nut (c) on the opposite side of the screw and adjust until the steering wheel is fixed firmly to the column.

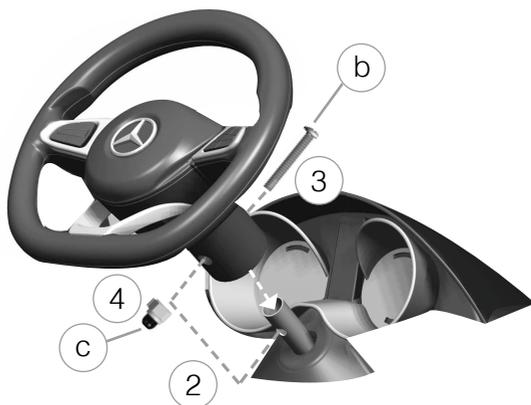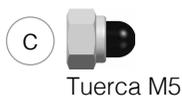



Assemble the rear view mirrors

1. Line up the base of the rear view mirror with the corresponding hole on the side of the car until it fits in place.
2. Insert screw (a) into the top of the base of the rear view mirror and fix in place with the help of a screwdriver (not included).
3. Repeat operation "2" with the other rear view mirror.



Assemble the backrest

1. Line up the base of the backrest with the hole in the seat and fit it in place.
2. Line up the central holes on the backrest with the holes in the back wall.
3. Insert screw (d) through the hole and tighten with the help of a screwdriver (not included).
4. Repeat operation "3" with the opposite hole.

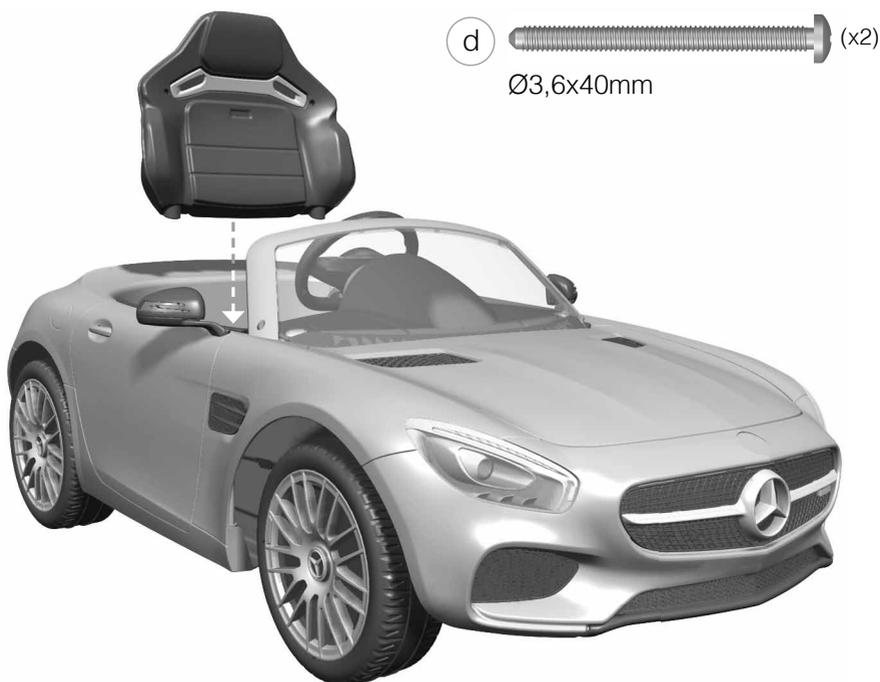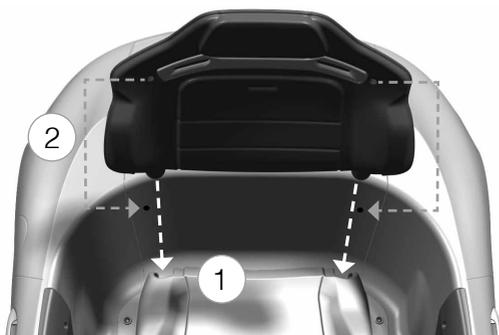

- When this product leaves the factory, the batteries are fully charged, but before using it for the first time you will need to charge them again for maximum effectiveness.
- Only an adult who has read and understood the security warnings should handle, charge, or recharge the batteries.
- Use under the supervision of an adult. Read the instructions before using. Follow them and keep them for future reference.

Car controls

1. Steering wheel: To steer the vehicle in the direction you wish to go.
2. Plug in an Mp3 player to hear sound over the speaker. Plug in an Mp3 player to hear sound over the speaker. (Option available exclusively on versions with light and sound).
3. Gear stick: Make the car go forwards (by moving the lever forwards) or back (by moving the lever back).
4. Pedal: Press down on the pedal to make the car start moving. When you release the pedal, the car will brake.
5. Front lights (LEDs*): When you press the pedal, the front lights will illuminate. (Option available exclusively on versions with light and sound).
6. Back lights (LEDs*): When you release the pedal, the backlights will flash. (Option available exclusively on versions with light and sound).




* The LEDs comply with current regulations.



Remote control function

Warning: Only an adult should make any changes to the remote control function.



1. Make sure the screw (b) and the nut (c) are inserted correctly, through the cover on the top (d) of the radio control system, lined up with the lower hole on the steering column, thereby locking the steering so it can be controlled via remote control.
2. Switch the remote control system to the ON position using the switch underneath the vehicle.
3. Using the App controls, use your mobile phone to control the direction of the vehicle. (Read the Remote Control App section).

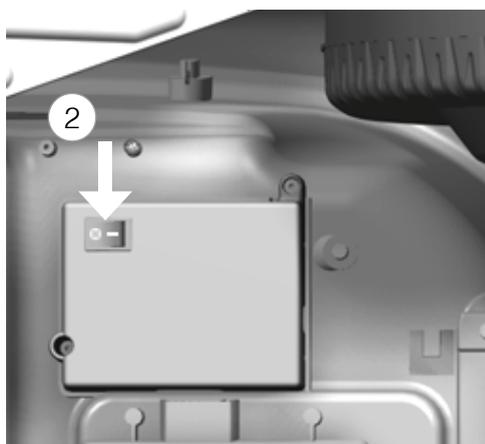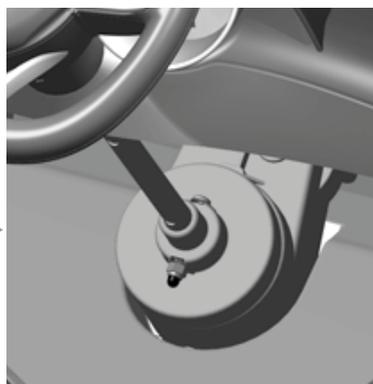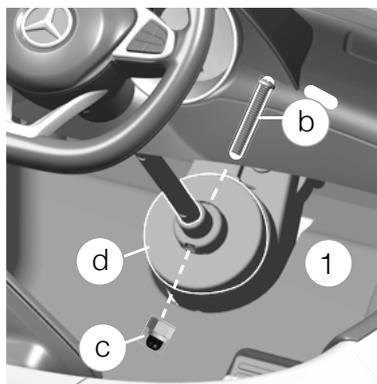

Functioning without remote control

Warning: Only an adult should make the changes required to cancel the remote control function.

1. Slide the top cover (d) on the radio control system upwards, lining it up with the hole above it on the steering column. Insert screw (b) and nut (c) correctly, through the cover and the steering column, at the height of the hole indicated previously, thereby unlocking the system. .
2. Switch the remote control system to the OFF position using the switch underneath the vehicle.
3. Through the application control, the vehicle cannot be controlled from your mobile phone.

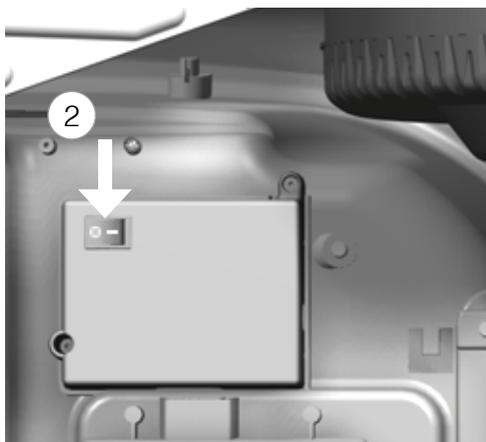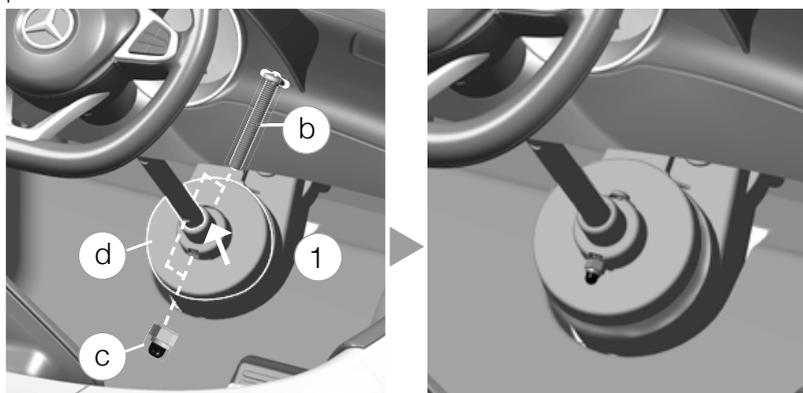

Remote Control App

1. Download the *iMove* app onto your mobile phone. There is a free version (Lite) or a billed version (Pro), available for Android or iOS.



2. Synchronise your product to your App.

2.1. Open the *iMove* App.

2.2. Make sure the car you wish to control is switched ON (See section "Remote control function", page 12).

2.3. On the *iMove* App you will see a pop-up window identifying the car.

2.4. Select and accept.


2.5. Pulsar el acelerador del coche. Ya estará sincronizado.

3. Using the App controls, you can use your mobile telephone to control the vehicle, según la versión adquirida. (Consultar tablas de controles).

2.1



2.3

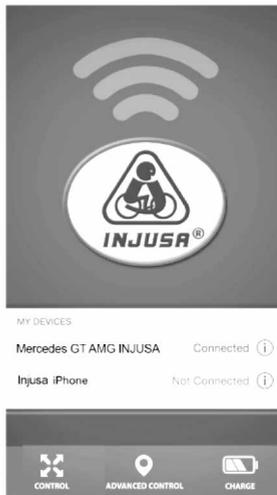

Industrial Juguetera, S.A. hereby certifies that the type of radio-electric equipment of the item Mercedes-Benz AMG GT ref.717-7172 and its versions, complies with Directive 2014/53/UE.

The complete text of the conformity UE declaration is available on the following Internet website: www.injusa.com.

Remote Control App



iMove	Lite	Pro
 <i>Battery</i>		
Vehicle battery charge indicator.	✓	✓
Warning! 20% battery remaining.		✓
The vehicle automatically stops when there is only 5% battery remaining. This prolongs the battery life.		✓



Remote Control App

iMove	Lite	Pro
 <i>Controls</i>		
Variable speed control.	✓	✓
Variable direction control.	✓	✓
Cruise speed control.		✓
Control vehicle front and backlights.		✓



Remote Control App

iMove	Lite	Pro
 <i>Advanced controls</i>		
When switched On (Radio control activated) the vehicle will come to an automatic safety stop when it loses signal.	✓	✓
When switched On (Radio control activated) the vehicle will beep to alert that it will come to an automatic safety stop.	✓	✓
When switched On (Radio control activated) your mobile device will make a sound/vibrate to alert you that the vehicle will come to an automatic safety stop.		✓
When switched Off (Radio control deactivated): vehicle safety distance control. The vehicle will come to a stop after the distance selected using the mobile device, giving a warning sound/vibration.		✓
When switched Off (Radio control deactivated): speed control. Vehicle speed is selected using the mobile device.		✓

General

- **WARNING!** Failing to carry out the recommended checks and maintenance can cause the user to fall out or the car to flip over.
- Regularly check the condition of the vehicle, especially all the fixtures and fastenings, and any parts that can get worn.
- Make sure the steering works correctly.

Cleaning

- Make sure the toy is disconnected from the charger when cleaning.
- Do not use abrasive cleaning products and do not pour water directly onto it. To clean the vehicle, wipe over with a damp cloth. **NEVER** get parts of the vehicle such as the engine, cables, fuse, batteries, or connectors wet.

Battery

- Only an adult who has read and understood the safety warnings should handle, charge, or recharge the battery.
- The battery, charger, cables, connectors, and the chassis should be regularly inspected to avoid potential dangers. Should any deterioration, or wear and tear be observed, defects should be corrected before the vehicle is used.
- By following these rules, you will be able to enjoy this product for a long time. Should you fail to observe these instructions, INJUSA cannot provide any guarantees regarding the effectiveness of the batteries.

Recharging the battery.


- Only an adult who has read and understood the safety warnings should handle, charge, or recharge the battery.
- When you notice that the car is going considerably slower than normal, this means that the batteries are running flat and need to be charged immediately, otherwise they will be damaged for good (Read the section on Charging the battery).

Periods of inactivity

- 144. Never leave the car inactive with a flat battery. If you know the toy will be unused for a long period of time, you should charge the battery and disconnect it, recharging every 5 or 6 months.

Replacing the battery

- Warning! Only an adult should change the battery.
1. Remove the vehicle seat with the help of a screwdriver (not included).
 2. Disconnect the battery connectors.
 3. Remove the battery cover with the help of a screwdriver (not included).
 4. Remove the damaged battery and insert the new one.
 5. Replace the battery cover.
 6. Reconnect the battery connectors correctly (see illustration).
 7. Replace the seat.

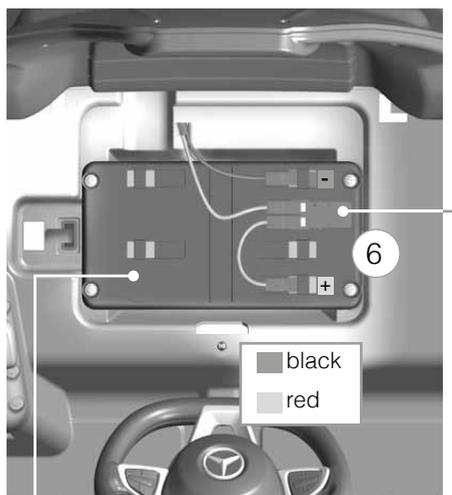

Thermal fuse (Read the section "Battery – thermal fuse")

Battery 6V

Recycling the battery

- DO NOT THROW THE BATTERY AWAY WITH THE HOUSEHOLD WASTE. Remove used batteries and dispose of them in the special containers.

Thermal fuse

- VERY IMPORTANT. This vehicle is fitted with a safety thermal fuse, an electric protector against current overloads or short circuits.
- You can order a replacement from INJUSA.

Battery for sound and Mp3

- To replacing the batteries used for sounds and Mp3 functions, read the section on “Assembly - Batteries for sound and Mp3”.

(Option available exclusively on versions with light and sound)

Recycling



- The symbol of a rubbish bin crossed through shown on your product means that it cannot be thrown away with normal household waste. To prevent possible environmental or health damage, separate this product out from other waste disposal channels to make sure it is recycled in an environmentally safe way. For more information about waste disposal points, contact your local authority.

- Only use original INJUSA parts to guarantee the vehicle functions correctly.
- **Important:** when ordering any spare or replacement parts, indicate the vehicle reference and the part code (See table of codes).

Screws



Ø3,1x9,5 mm
cod. 5098



Ø3,5x12 mm
cod. 5108



Ø4x16 mm
cod. 5014



Ø3,6x13 mm
cod. 5064



M5x35 mm
cod. 5084



Ø3,6x40 mm




M5
cod. 6014




Ø12
cod. 9003



Ø12
cod. 9009

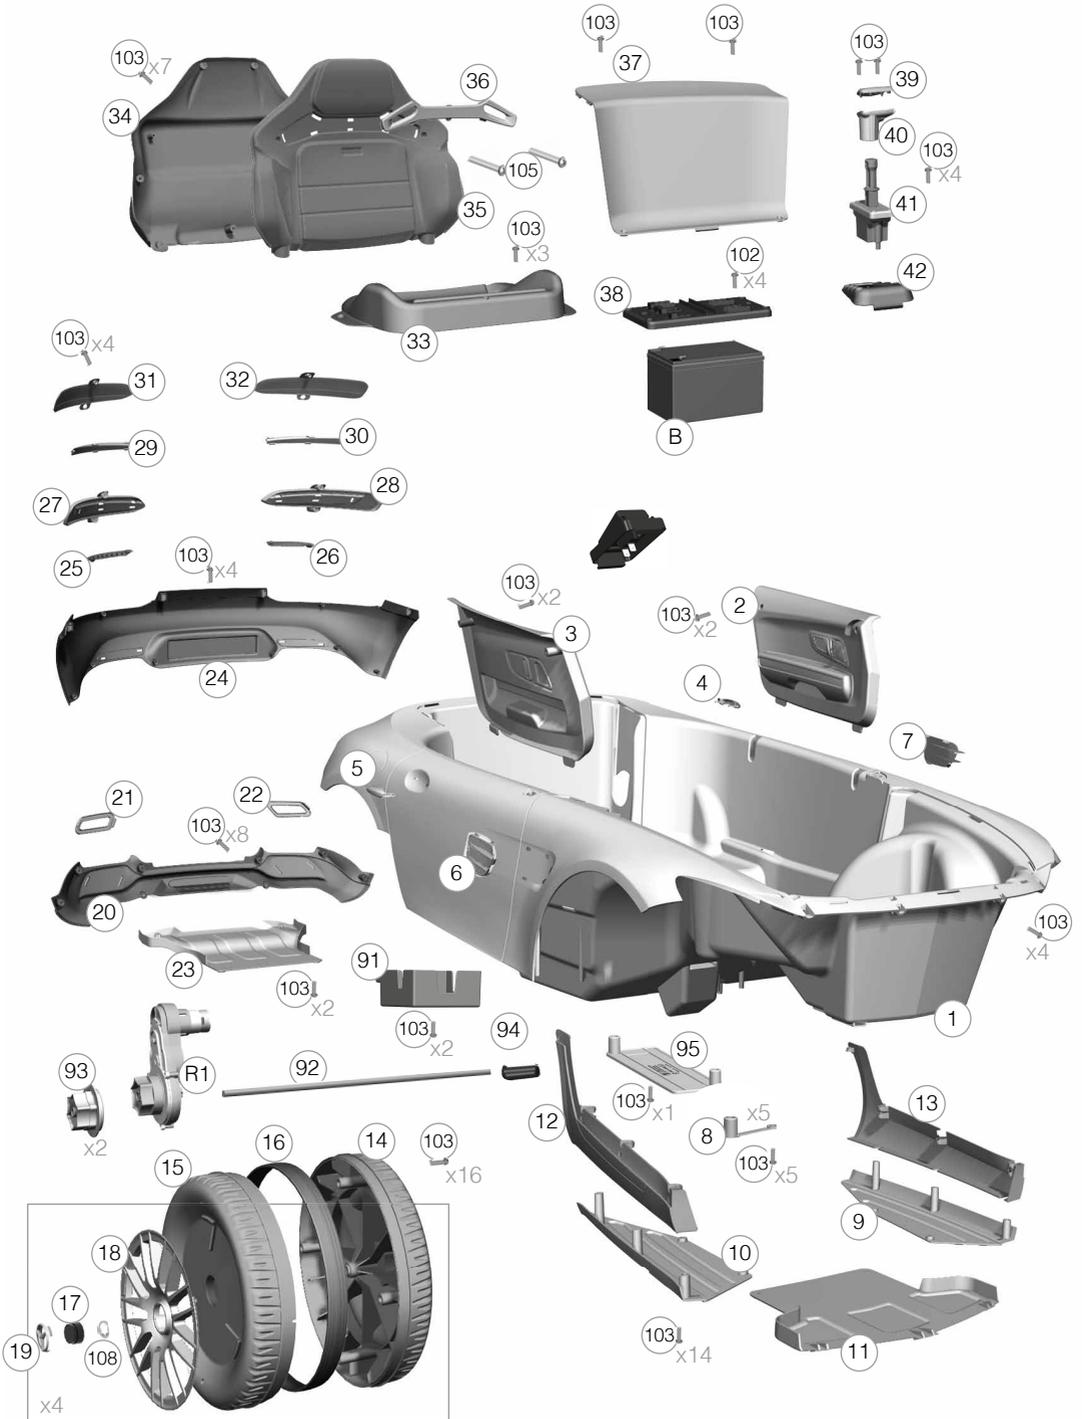

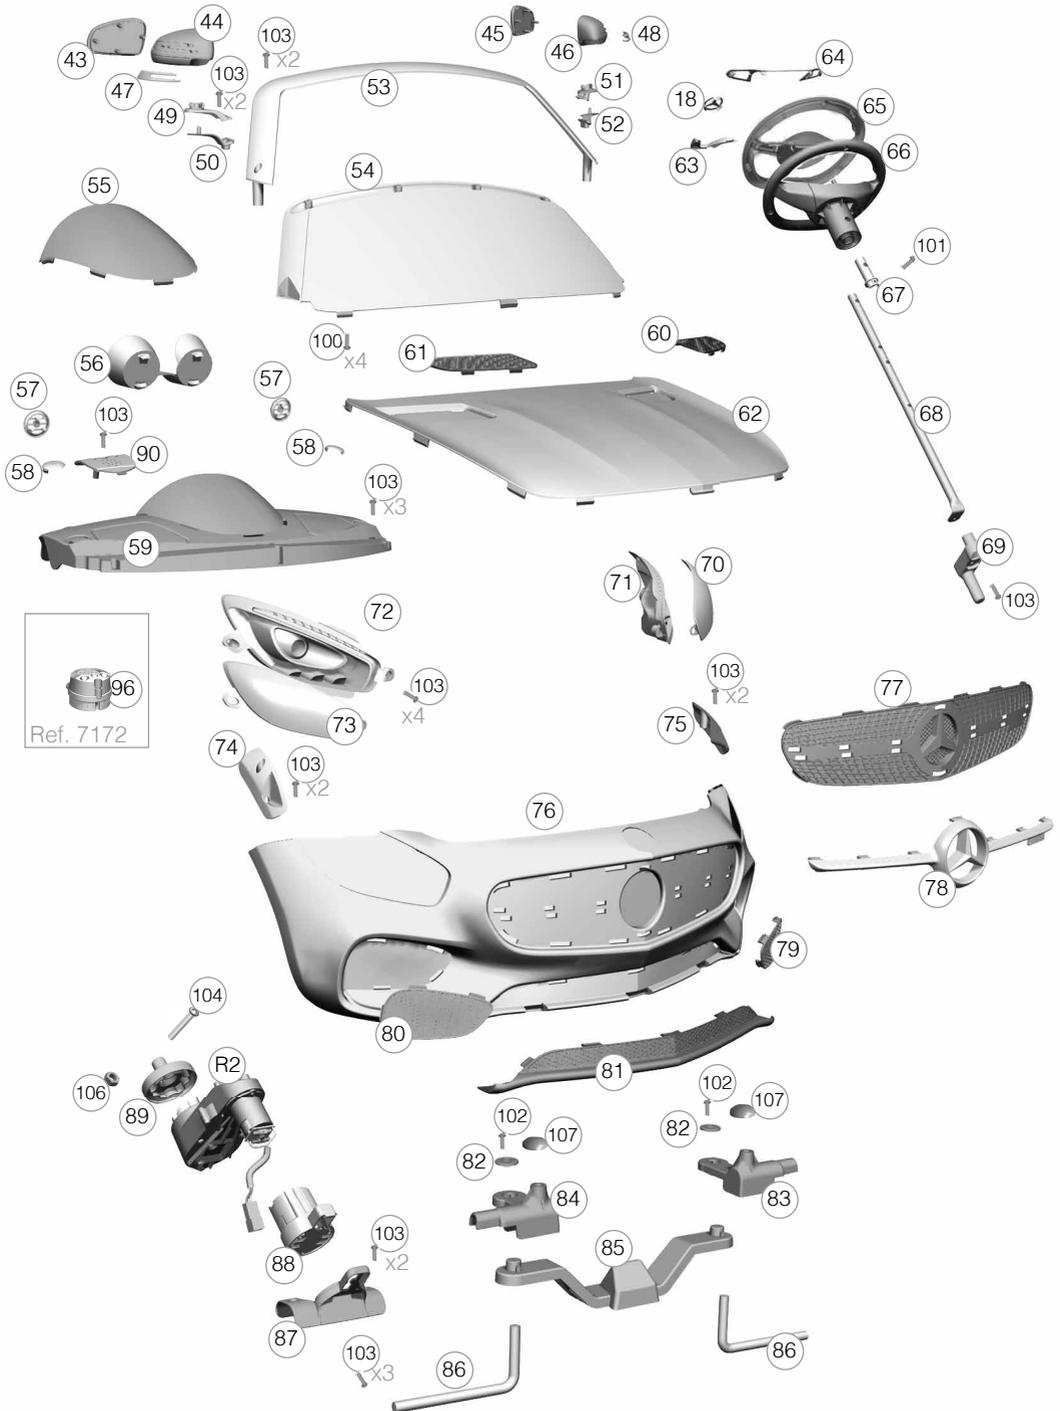

Ref. 717- Ref. 7172

No.	code	units
1	167171	1
2	167172	1
3	167173	1
4	167174	1
5	167175	1
6	167176	1
7	167177	1
8	167178	5
9	167179	1
10	1671710	1
11	1671711	1
12	1671712	1
13	1671713	1
14	1671714	4
15	1671715	4
16	1671716	4
17	1671717	4
18	1671718	5
19	1671719	4
20	1671720	1
21	1671721	1
22	1671722	1
23	1671723	1
24	1671724	1
25	1671725	1
26	1671726	1
27	1671727	1
28	1671728	1
29	1671729	1
30	1671730	1
31	1671731	1
32	1671732	1
33	1671733	1
34	1671734	1
35	1671735	1
36	1671736	1
37	1671737	1
38	1671738	1
39	1671739	1
40	1671740	1
41	1671741	1

No.	code	units
42	1671742	1
43	1671743	1
44	1671744	1
45	1671745	1
46	1671746	1
47	1671747	1
48	1671748	1
49	1671749	1
50	1671750	1
51	1671751	1
52	1671752	1
53	1671753	1
54	1671754	1
55	1671755	1
56	1671756	1
57	1671757	2
58	1671758	2
59	1671759	1
60	1671760	1
61	1671761	1
62	1671762	1
63	1671763	1
64	1671764	1
65	1671765	1
66	1671766	1
67	1671767	1
68	1671768	1
69	1671769	1
70	1671770	1
71	1671771	1
72	1671772	1
73	1671773	1
74	1671774	1
75	1671775	1
76	1671776	1
77	1671777	1
78	1671778	1
79	1671779	1
80	1671780	1
81	1671781	1
82	1671782	2

No.	code	units
83	1671783	1
84	1671784	1
85	1671785	1
86	1671786	2
87	1671787	1
88	1671788	1
89	1671789	1
90	1671790	1
91	1671791	1
92	1671792	1
93	1671793	2
94	1671794	1
95	1671795	1
100	16717100	6
101	16717101	1
102	16717102	6
103	16717103	103
104	16717104	2
105	16717105	2
106	16717106	2
107	16717107	2
108	16717108	4

Ref. 7172

No.	code	units
96	1671796	1

If your Mercedes-Benz AMG GT needs repairs, an assistance service, replacement parts, has been damaged, or if you have any questions regarding this item, PLEASE DO NOT RETURN IT TO THE PLACE WHERE IT WAS PURCHASED. We will be delighted to help you via our customer service department, where we can offer you the best assistance.

You can contact the service department for your country:

UK

 0 1843 60 44 48

FAX: 0 1843 60 35 05

 www.injusa.com

 Robbie Toys Limited
Unit 11 Anson Close,
Pysons Road Industrial Estate,
Broadstairs Kent CT10 2YB (UK)

